


Proposed Critical Area Steep Slope Regulations

NOTE: The phrase "natural topographic feature" is used in definitions of bluff and steep slopes for the purpose of regulating the location of structures in the Critical Area. "Natural topographic feature" does not mean unaltered, but simply distinguishes these from constructed things such as levees and road embankments. This map is based on geographic data that does not distinguish natural topographic features from constructed slopes. Map created May 3, 2006

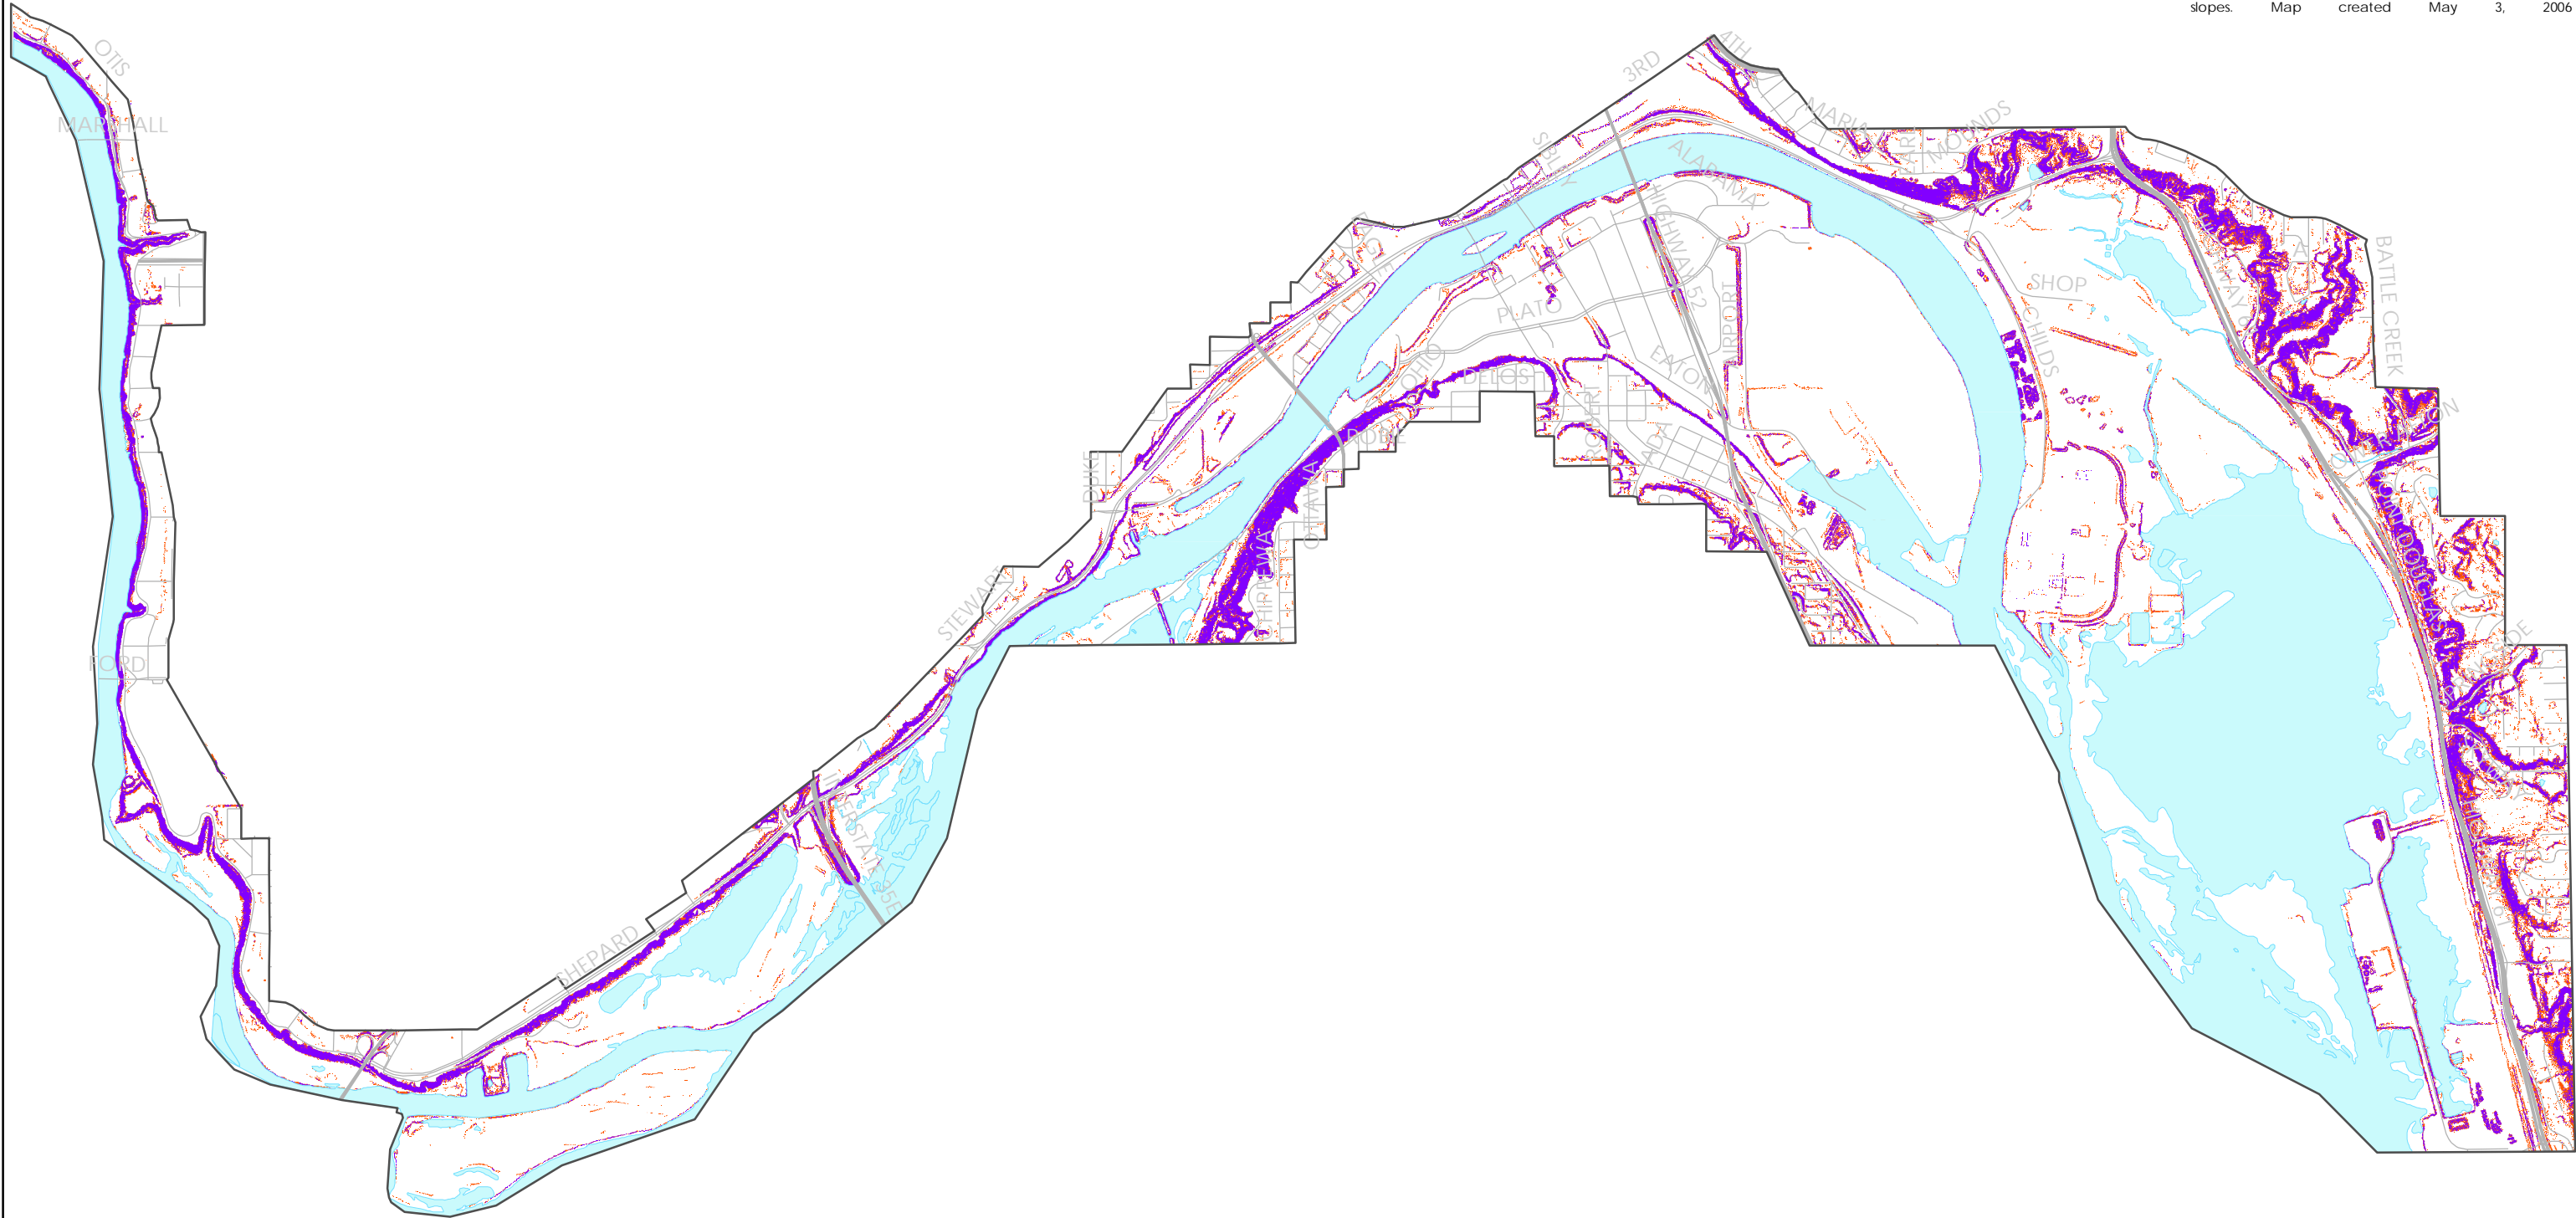

Very steep slopes (>18%, >9 ft. high)
 Steep slopes (>12%, >6 ft. high)